




EASC DC Microprocessor Based Analog Controller

The Electric Actuator Smart Controller (*EASC*) card provides accurate positioning control of electric motor actuators using an analog input signal. Setup and calibration is greatly simplified using microprocessor technology. There are no DIP switches to set or trimming potentiometers to adjust. Setup is quick and easy using the *EASC* Menu viewed on an LED display. No external meters are required, even for potentiometer setup. Once the initial menu settings are chosen, the *EASC* performs a self-calibration routine, applying the menu selections to actual actuator performance. Calibration values are then stored in permanent nonvolatile memory.

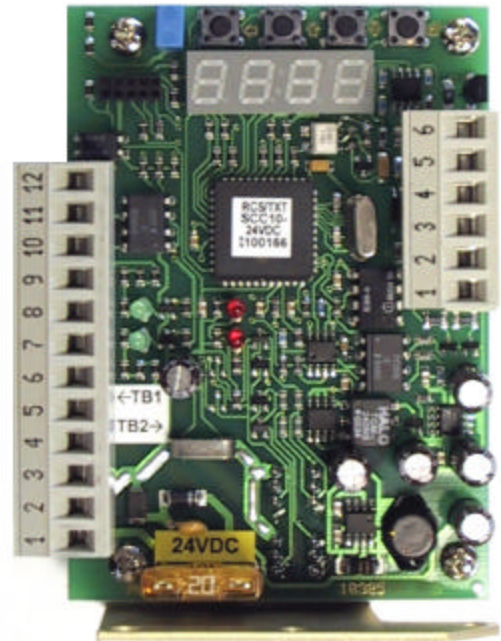

Features

- Mounts internally in:
RCS actuator models: MAR-10, MAR-50, MAR-90, MAR-100, MAR-160, MAR-250, MAR-800 & all SurePowr models.
- Onboard LED display facilitates setup and calibration using the *EASC* Menu Setup.
- Menu selection of input/output ranges including 4-20 mA_{dc}, 1-5 V_{dc}, 2-10 V_{dc} and 0-10 V_{dc}, or virtually any custom range required.
- Automatic calibration: no resistors to add, no jumpers, trimming potentiometers or DIP switches to adjust. Calibration is as simple as pressing a button.
- Three isolated open collector transistor outputs: fault, full closed and full open.
- Analog input and output electrically isolated from motor supply
- Menu selectable fail options.
- Intelligent positioning, using dynamic braking, reduces motor cycling, increases motor life and extends the actuator duty.
- Quick disconnect terminal strips facilitate fast and easy actuator maintenance and troubleshooting.
- Always wires the same; no need to determine rotation direction during installation; rotation is selected using the *EASC* Menu.
- Robust power switching components, designed specifically for actuator motors, virtually eliminate field failures.

Specifications

Power Requirements:

Model SCC10-24VDC: 10 - 28 Vdc

Input Command Signal:

Menu selectable factory defaults:

- 4 – 20 mAdc
- 1 – 5 Vdc
- 2 – 10 Vdc
- 0 – 10 Vdc

Infinite adjustment using *EASC* Menu System

Output Command Signal:

Menu selectable factory defaults:

- 4 – 20 mAdc
- 1 – 5 Vdc
- 2 – 10 Vdc
- 0 – 10 Vdc

Infinite adjustment using *EASC* Menu System

Signal Impedance:

Input: 250Ω current, 200KΩ voltage

Output: maximum load 500Ω current, 500Ω voltage

Power Output:

Solid state, isolated from the input command and output position signals and rated at:

- 10 A continuous at 1- 28 Vdc
- 20 A maximum, intermittent duty

All ratings assume the *EASC* is mounted on the actuator base plate.

Sensitivity:

Fully adjustable from 0.5% of total span, factory set to 1% of total span

Dead band:


Automatically set during calibration. Factory default at 1% of total span. Additional settings are available using the *EASC* Menu System.

Zero Adjustment:

Automatically set during calibration.

Span Adjustment:

Automatically set during calibration.

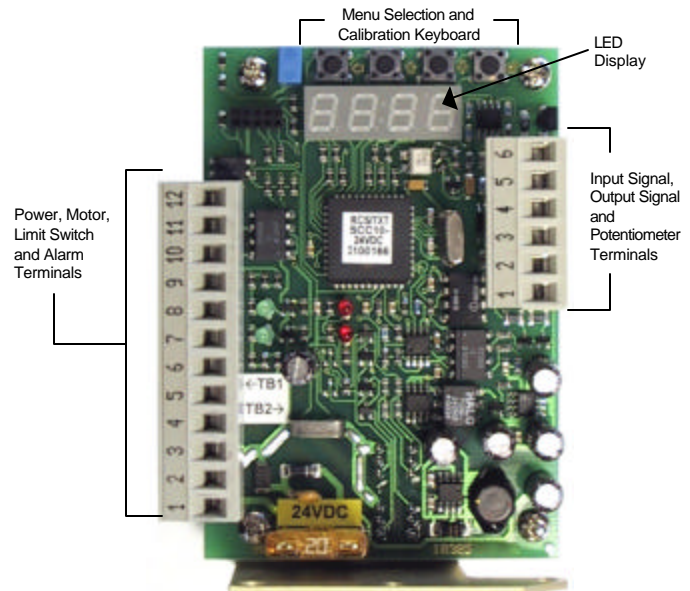

Split Range:

Settable within the span range using at least 1.5 Vdc or 3 mAdc of input

Ambient Temperature:

- 40° F (with heater) to +150° F (-40° to +65° C)

Action on Loss of Command Signal:

Factory default:

- Fail in last position (no movement)
- For a setting of **ZERO** input signal, the system fails to minimum signal position

Additional settings available through *EASC* Menu:

- Fail open (maximum signal value)
- Fail closed (minimum signal value)
- Fail to a preset position

Open Collector Transistor Outputs:

Three isolated open collector transistor outputs:

- Fault indicating loss of power, fuse failed, command signal loss or failure to move to position in preset time
- End of travel open
- End of travel closed
- Transistor Ratings:
 - 60 mA @ 30Vdc

Size:

3.50 x 1.63 x 4 in.

1020 Rankin Road, Houston, TX 77073
P.O. Box 60706, Houston, TX 77205
TEL: (281) 443-7000
FAX: (281) 443-6308 / 4802

